

MOUNTING INSTRUCTION



VD2-Ø60 6-10 LITER



ACO FUNKI A/S

Kirkevænget 5
DK-7400 Herning

Tel. +45 9711 9600

Fax +45 9711 9677

www.acofunki.com

DANISH DESIGN | GERMAN QUALITY | GLOBAL EXPERIENCE


6 LITER



8 LITER



10 LITER

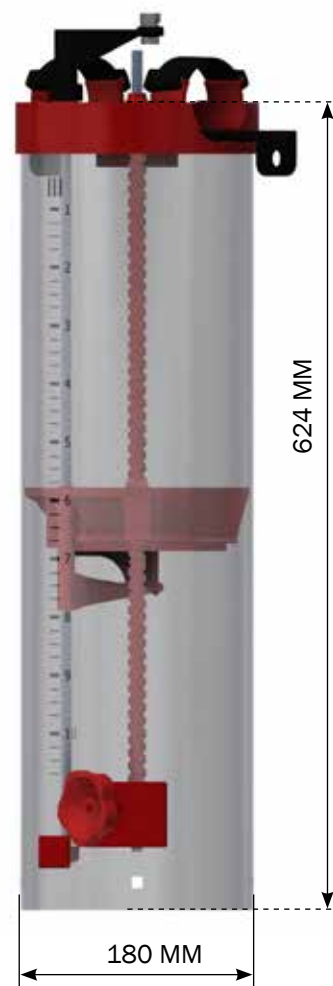



VD2-Ø60, 6 -10 LITER



PART LIST

NO.	ITEM NO.	DESCRIPTION	PCS.
a	0221-252	VD2-Ø60, 6 LITRE WITH Ø75 MM OUTLET	
b	0221-253	VD2-Ø60, 8 LITRE WITH Ø75 MM OUTLET	
c	0221-254	VD2-Ø60, 10 LITRE WITH Ø75 MM OUTLET	
1	0221-338	LONG SLIDE HOLE VD2 / VD22	1
2	0221-448	CLAMP VD2	2
3	0221-133	WIRE CLAMP STAINLESS STEEL	1
4	0221-285	VD2 RELEASE LEVER	1
5	0221-286	VD2 TOP FOR 6 MM SQUARE BAR	1
6a	0221-298	CONTAINER TYPE 6 VD2 Ø75	1
6b	0221-296	CONTAINER TYPE 8 VD2 Ø75	1
6c	0221-294	CONTAINER TYPE 10 VD2 Ø75	1
7	30308012	SET SCREW M8X12 A2 DIN 933	1



SPAREPARTS FOR CONTAINER TYPE VD2-Ø60, 6-10 LITER

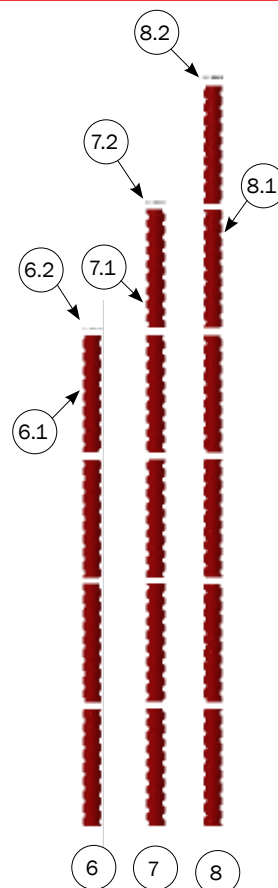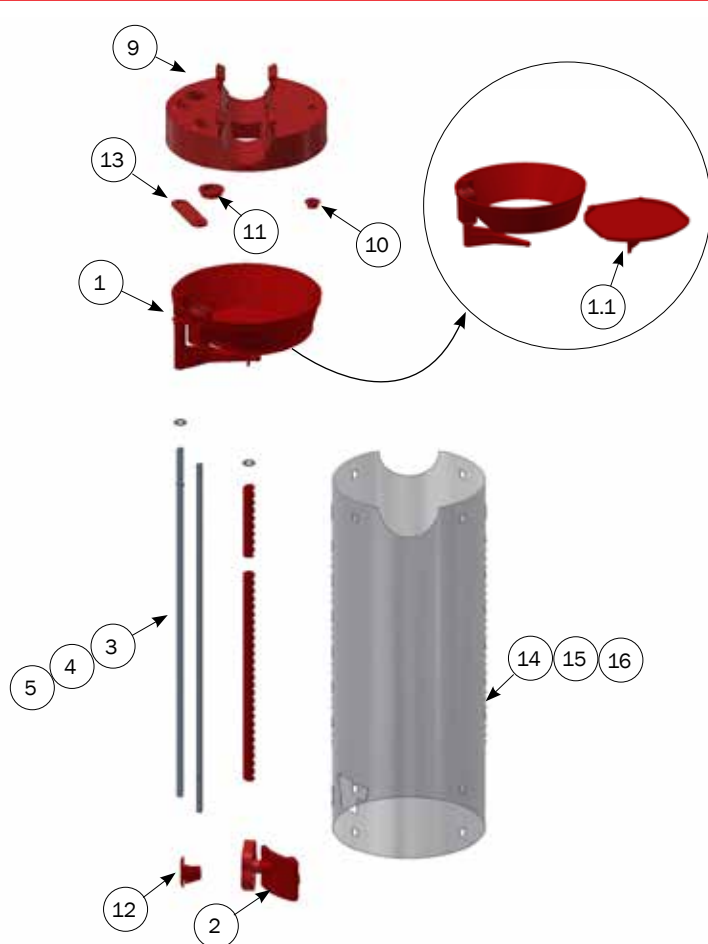


PART LIST			
NO.	ITEM NO.	DESCRIPTION	PCS.
	0221-298	CONTAINER TYPE 6 VD2 Ø75	
	0221-296	CONTAINER TYPE 8 VD2 Ø75	
	0221-294	CONTAINER TYPE 10 VD2 Ø75	
1	0221-138	BOTTOM WITH CLOSING FLAP AND -ARM VD1+VD2	1
1.1	0131-176	BOTTOM HATCH F/VD2	1
2	0221-280	HANDLE WITH MITRE GEAR VD2	1
3	0221-201	REGULATING LEVER WITH MARK 6L VD2	2
4	0221-202	REGULATING LEVER WITH MARK 8L VD2	2
5	0221-203	REGULATING LEVER WITH MARK 10L VD2	2
6	0221-137	VD1+VD2 SPINDLE TYPE 6, COMPLETE	1
6.1	0221-160	SPINDEL TP Ø14X20	4
6.2	35900086	LOCK WASHER FOR VD2	2
7	0221-162	VD1+VD2 SPINDLE TYPE 8, COMPLETE	1
7.1	0221-160	SPINDEL TP Ø14X20	5
7.2	35900086	LOCK WASHER FOR VD2	2
8	0221-163	VD1+VD2 SPINDLE TYPE 10, COMPLETE	1
8.1	0221-160	SPINDEL TP Ø14X20	6
8.2	35900086	LOCK WASHER FOR VD2	2
9	0221-142	COVER FOR VOLDOS VD2	1
10	23900304	PLASTIC PLUG FOR VD2, SMALL	1
11	23900305	PLASTIC PLUG FOR VD2, BIG	1
12	0221-145	HOLDER FOR ROD VD2	1
13	0221-004	SPACER FOR VD2	1
14	0221-300	PVC CONTAINER 6L VD2 AND VD22	1
15	0221-301	PVC CONTAINER 8L VD2 AND VD22	1
16	0221-302	PVC CONTAINER 10L VD2 AND VD22	1

MOUNTING

Position of handle

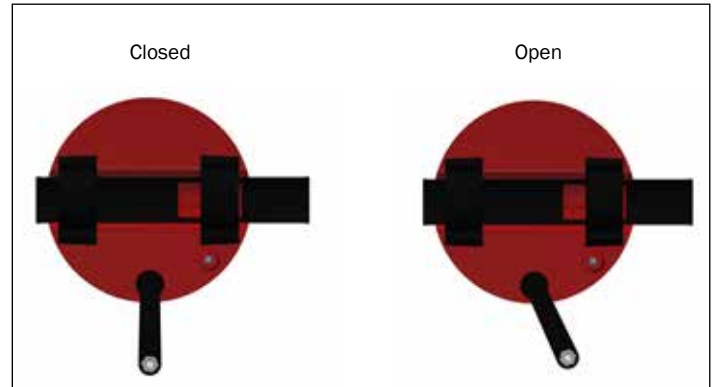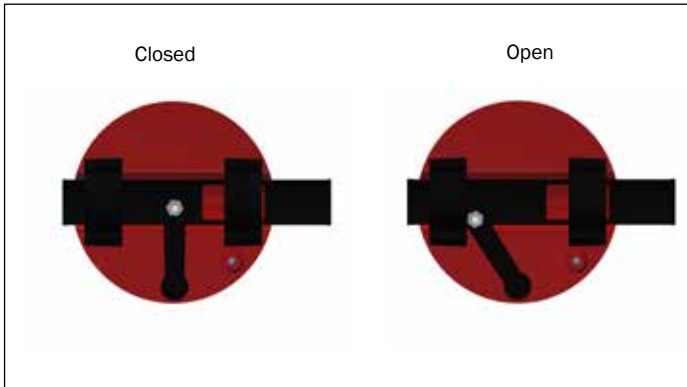


Mounted on Ø60mm Pipe

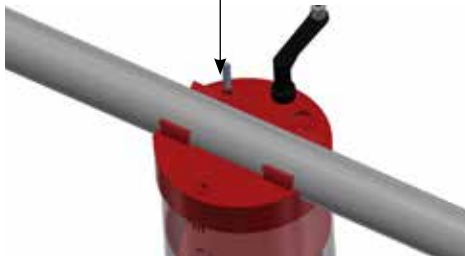


Mounting of Clamps



Mounted with **Adapter VD2/VD6** for reducer

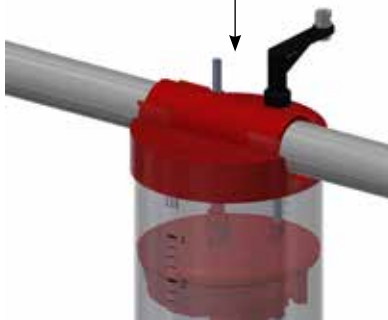

Mounting of Wire Clamp st

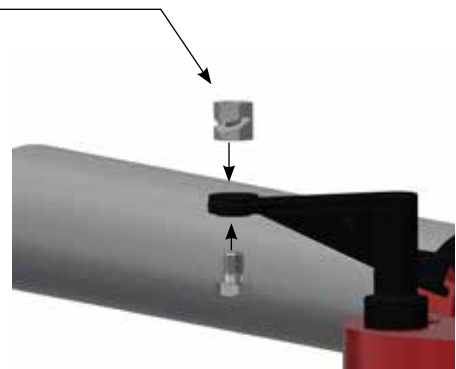

0131-191
VD2/VD6 CONNECTION FOR Ø38 MM
CONVEYOR TUBE

0221-400
VD2/VD6 CONNECTION FOR Ø50 MM
CONVEYOR TUBE

0221-401
VD2/VD6 CONNECTION FOR Ø55 MM
CONVEYOR TUB

 
MOUNTED ON DOWN PIPE



0221-512





0221-515



0221-516

MOUNTED ON DOWN PIPE

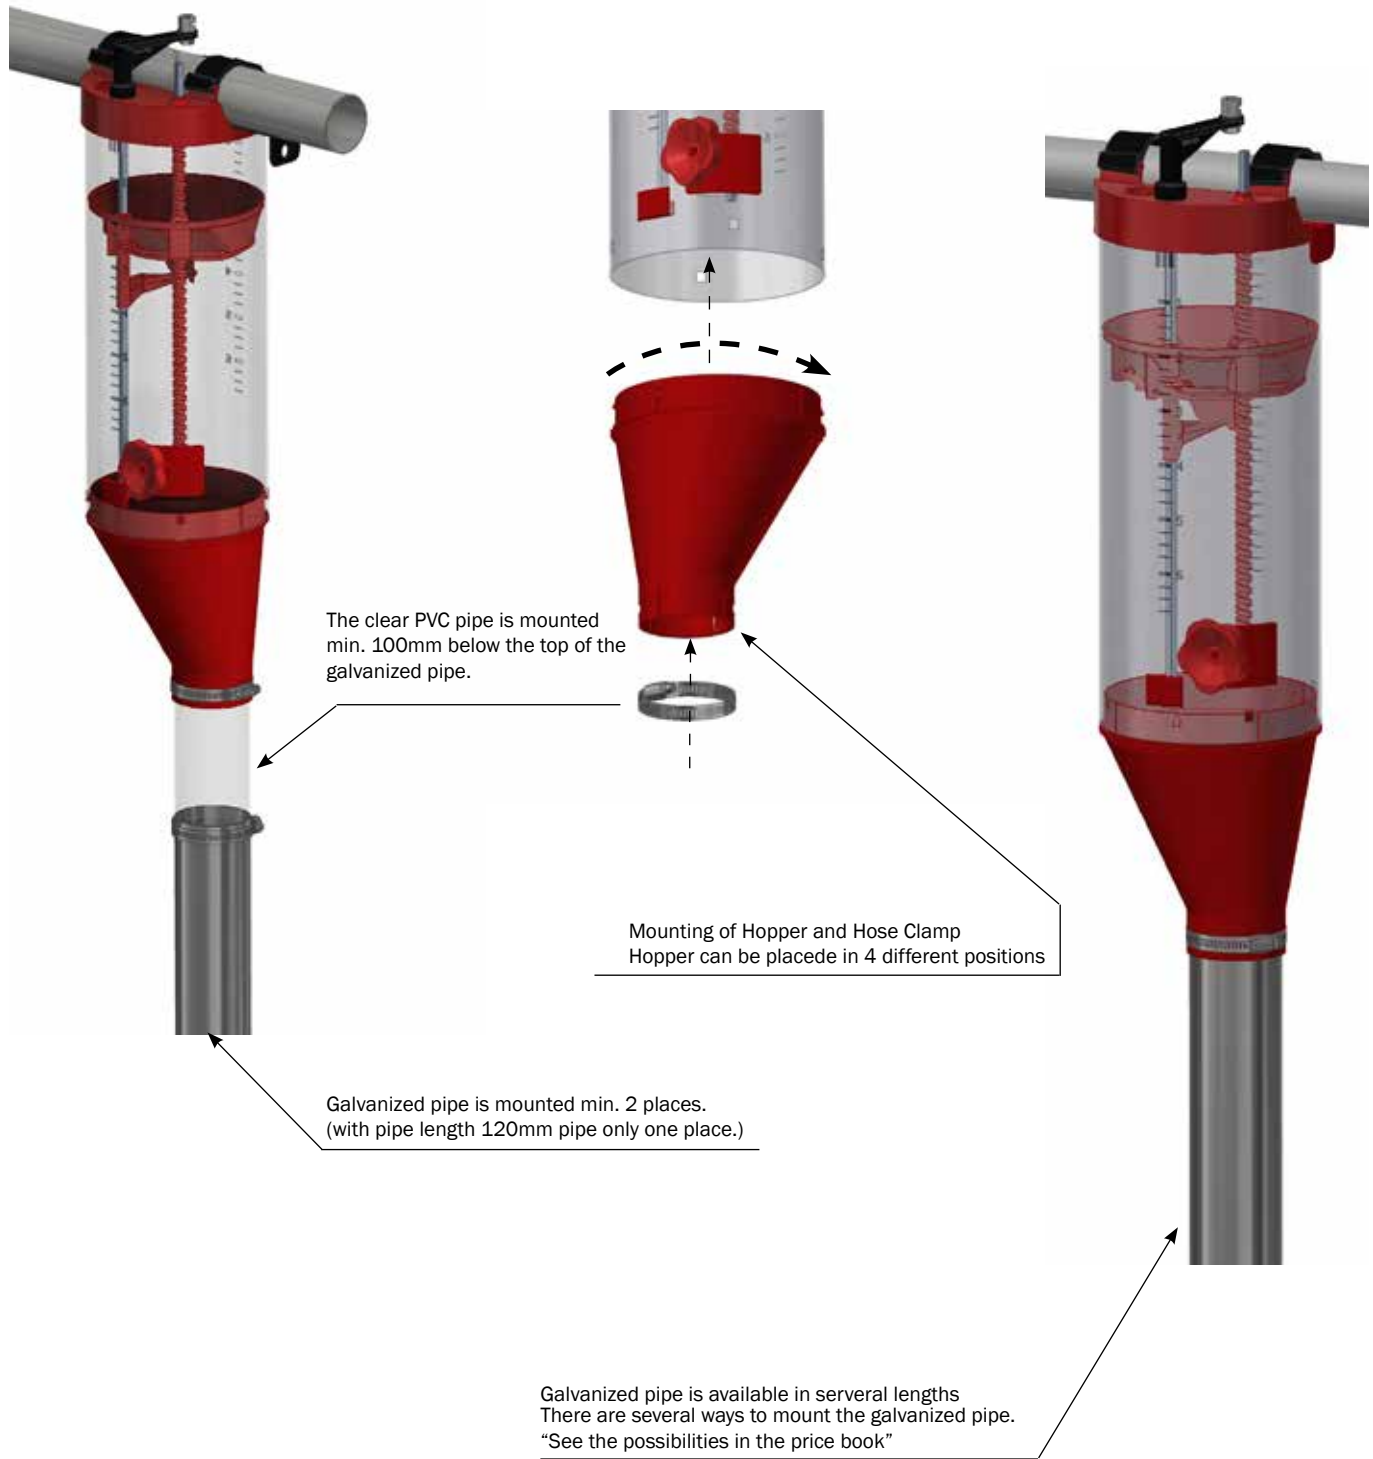

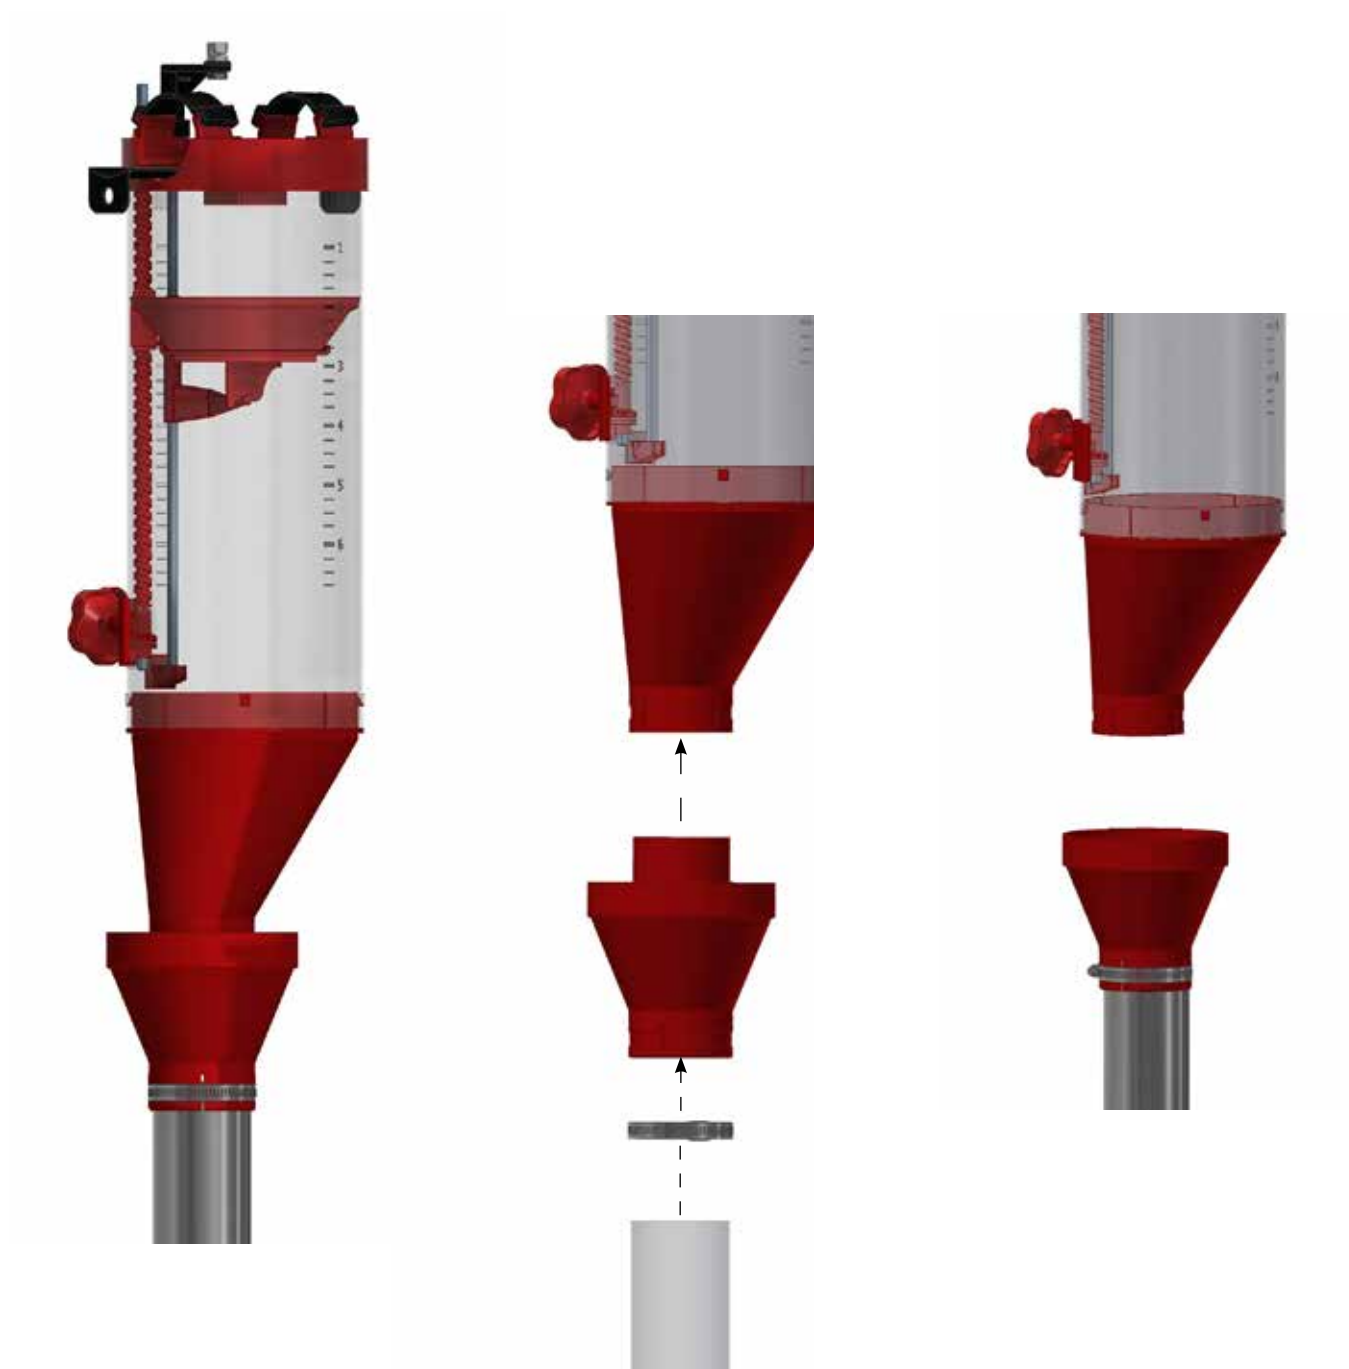


91810
HOPPER WITH INSERT 75 MM FEEDPIPE



91813
HOPPER WITH CLAMP FOR 75 MM
FEEDPIPE

MOUNTED OF VD5 BOTTOM

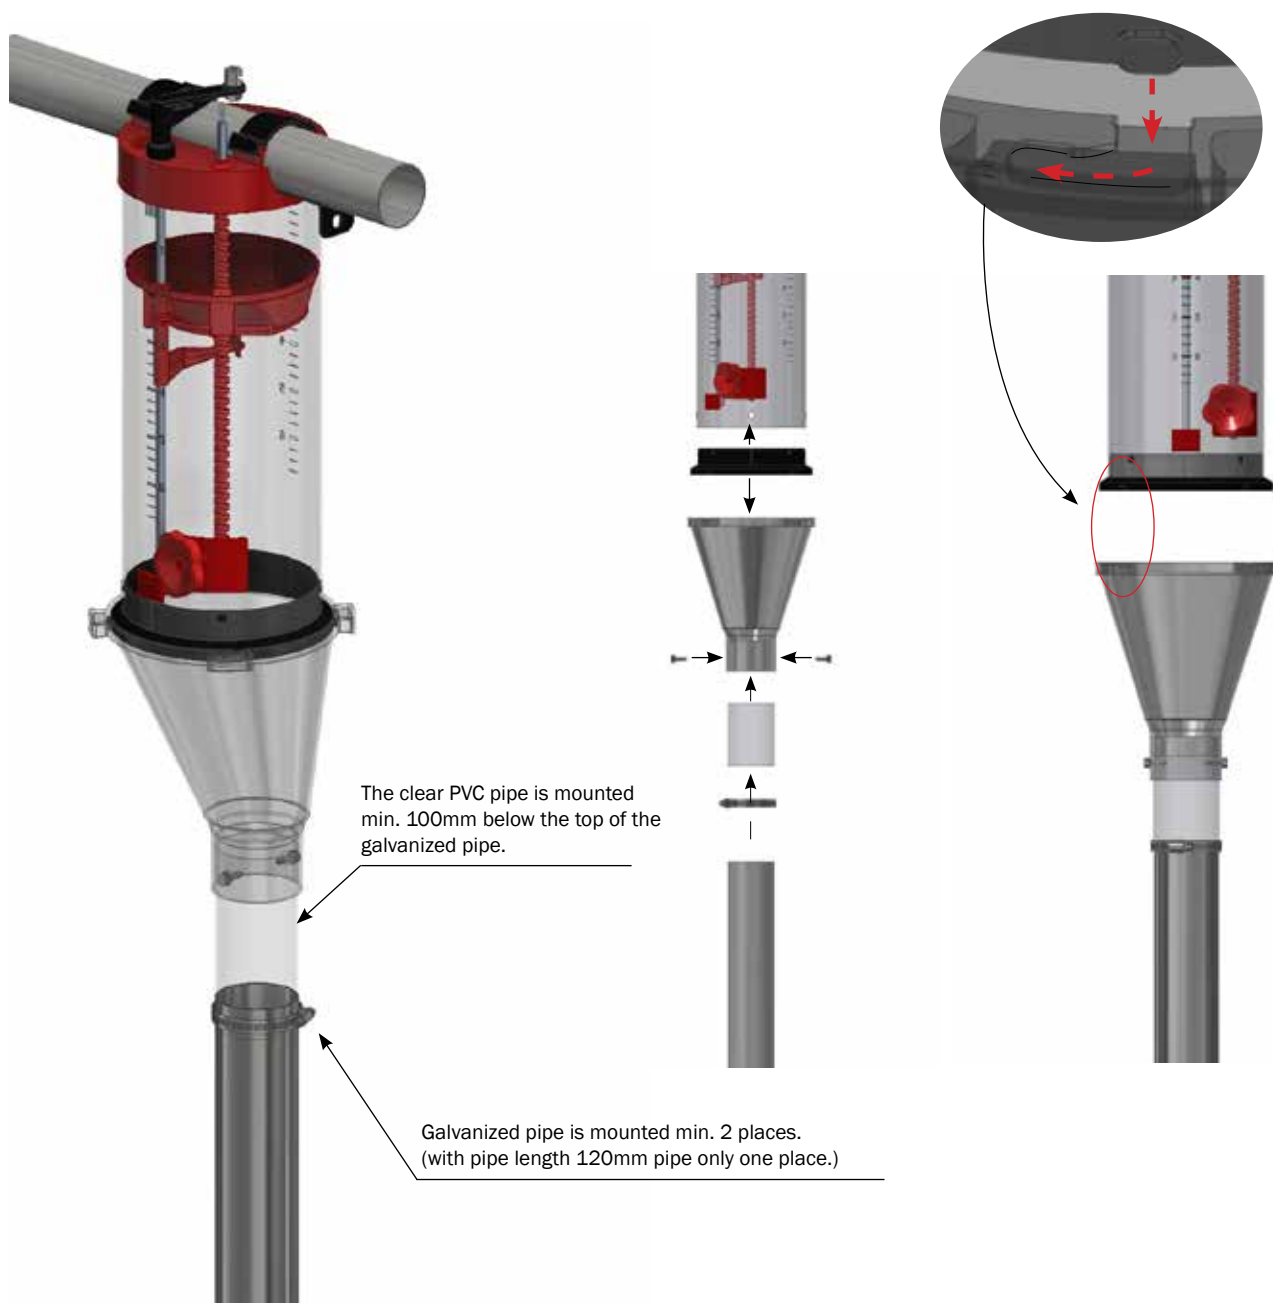

0221-516
VD5 BOTTOM HOPPER FOR VD2
CENTRAL




0221-515
VD5 BOTTOM HOPPER FOR VD2
DECENTRAL

RULES



The hole in the side wall of the slide shows whether the VD is open or closed.



If the part with the hole protrudes above the top of the dispenser, the VD is closed. If it is close to the dispenser, the VD is open.

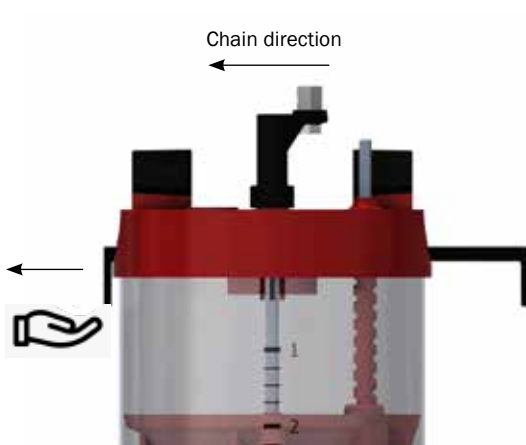

The slide is installed in the same direction as the chain's direction of movement.

Pull the slide instead of pushing it.


Installing of bottom flap

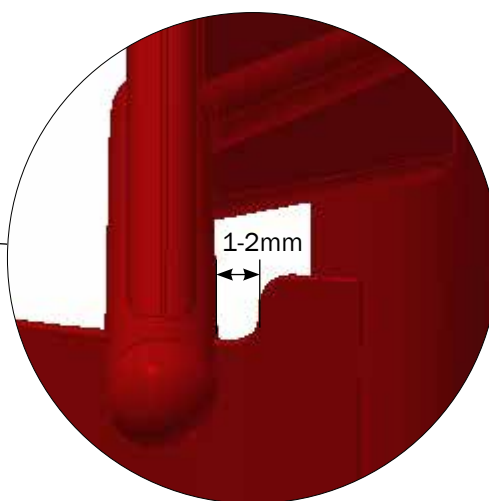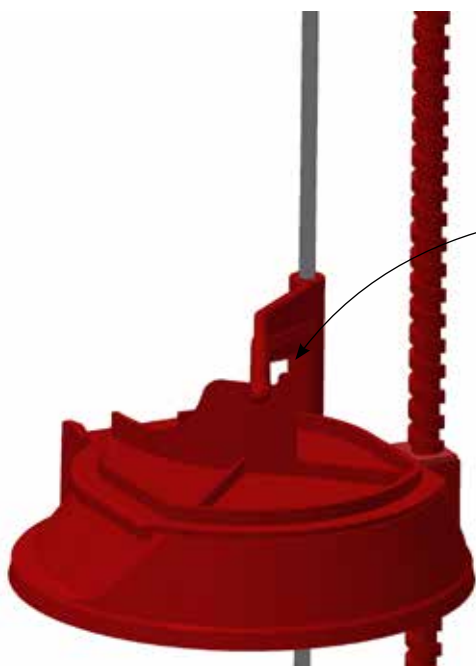

If it goes tight, check if it is set correctly, as shown on the picture

RULES

Distance between VD2 on pipe

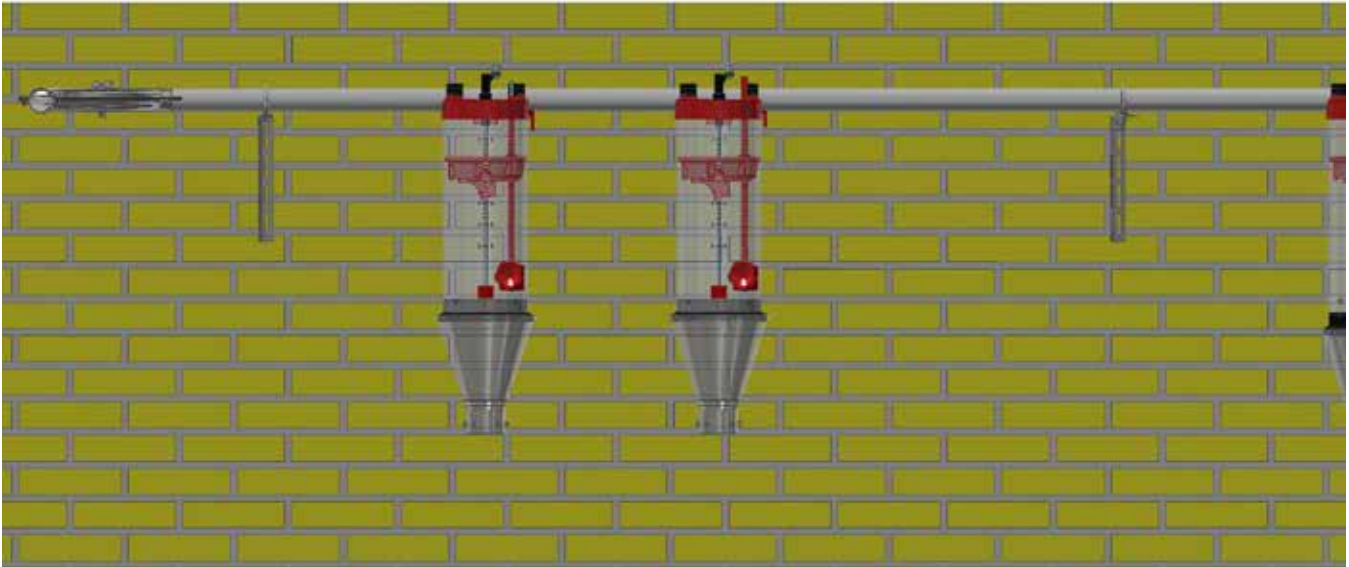

For further guidance, please refer to installation guide M-1051.

[illegible]