


M-8500_GB

MOUNTING INSTRUCTION



COMBI-FLOOR

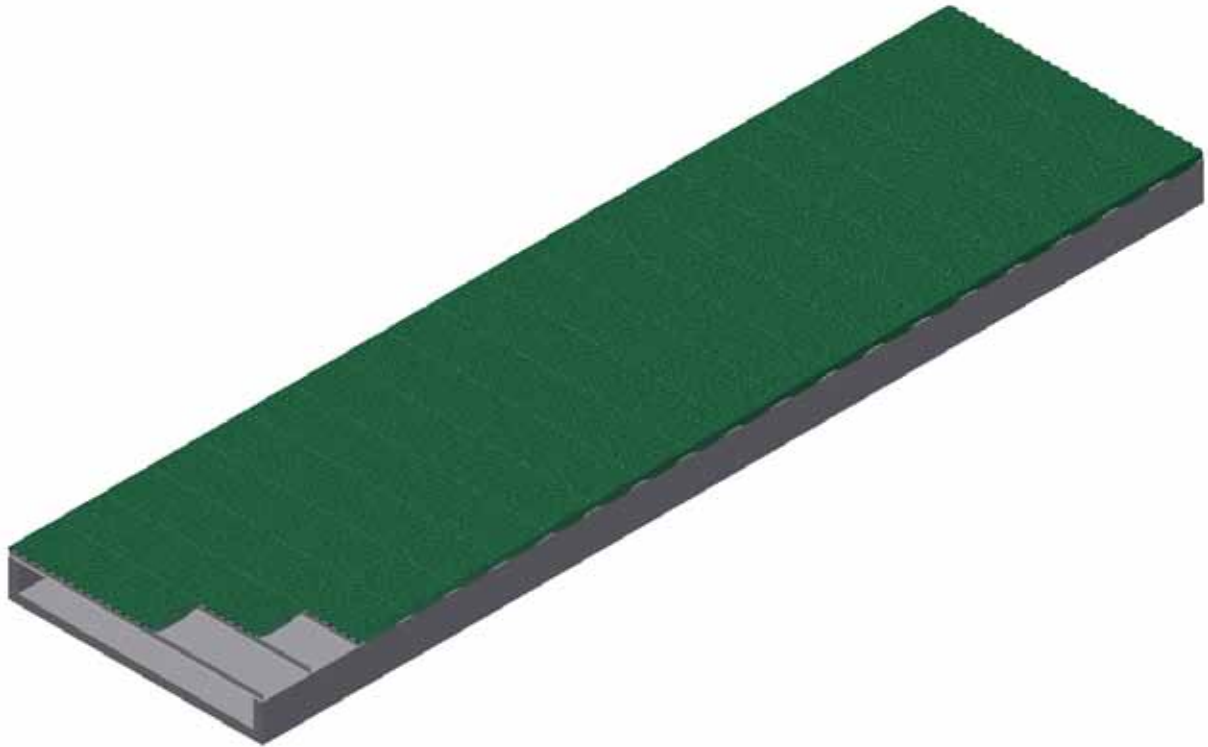

ACO FUNKI A/S

Kirkevænget 5
DK-7400 Herning

Tel. +45 9711 9600

Fax +45 9711 9677



www.acofunki.com

FUNKI


DANISH DESIGN | GERMAN QUALITY | GLOBAL EXPERIENCE

MOUNTING OF SUPPORT FOR COMBI-FLOOR


>>> **OBS** <<< Room, slats and support has to be climatized to 15-18 ° before mounting.

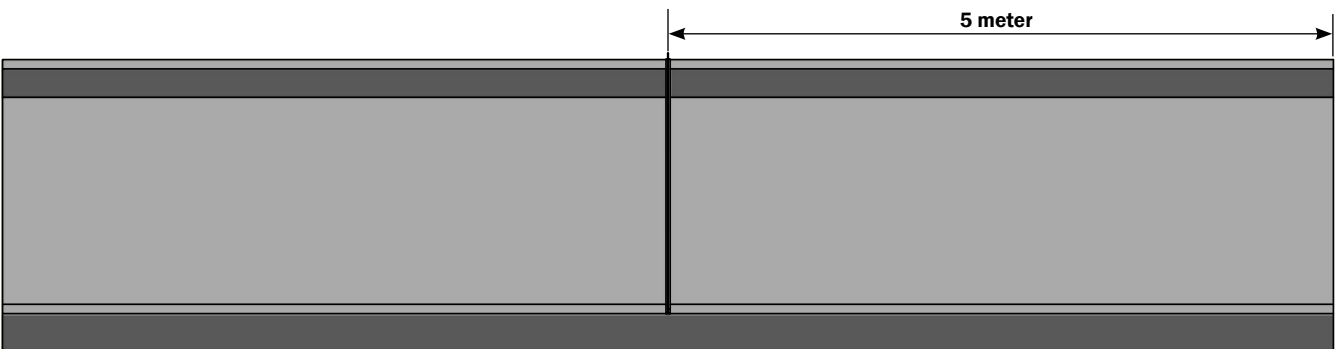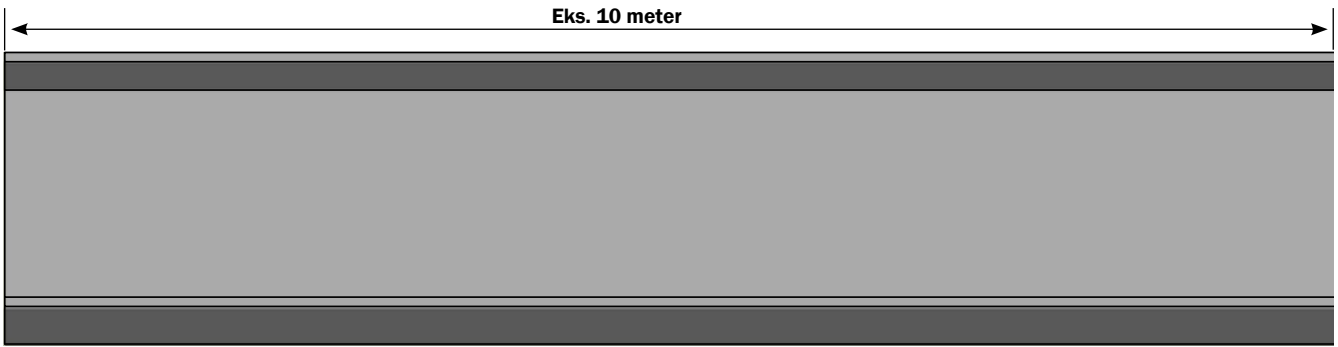

The first support is placed in the middle of the slurry pit

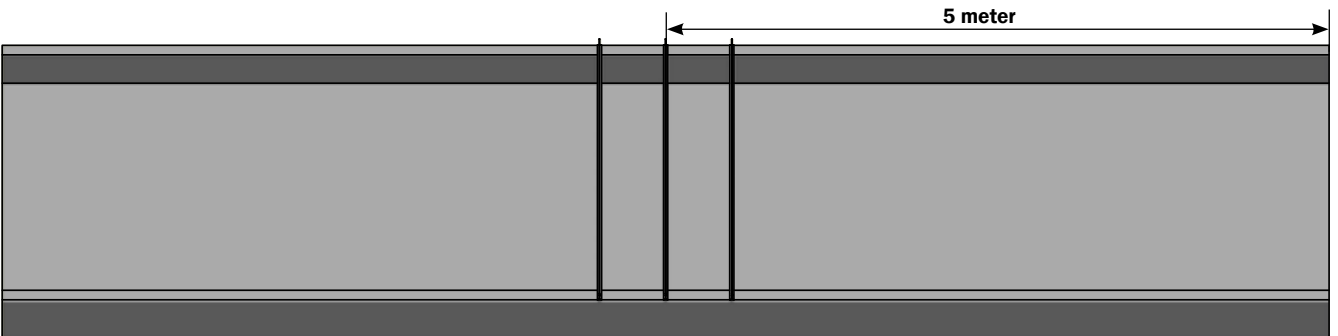


Then place one support on each side of the first support.

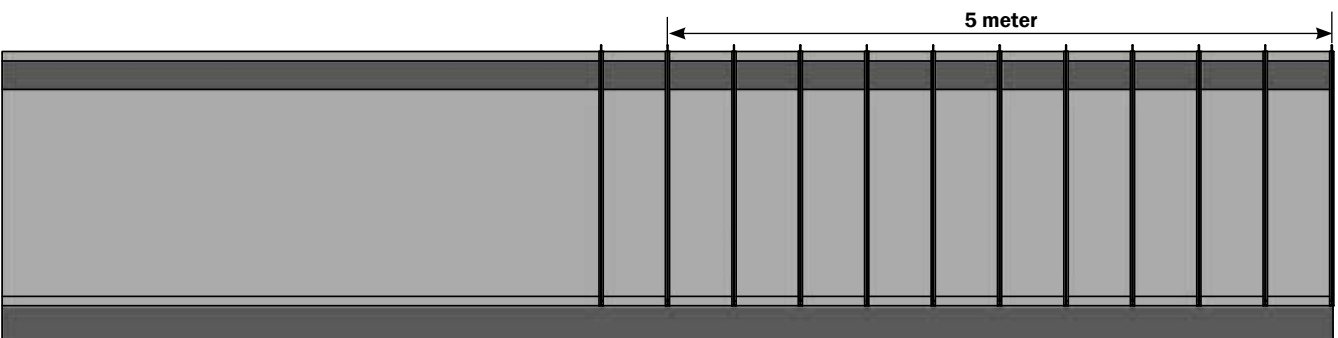


After that, place the rest of the support on the first side.



MOUNTING OF SLATS FOR COMBI-FLOOR

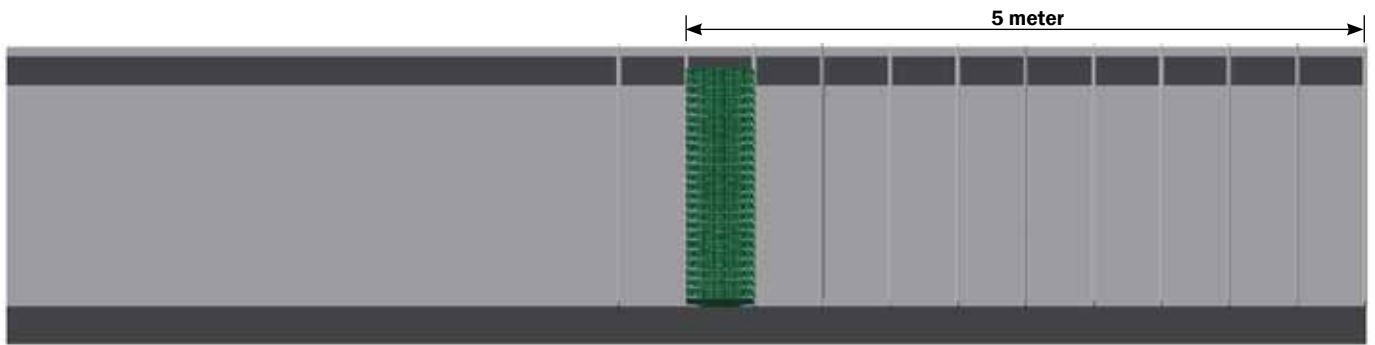


The first slat is placed between the center support and the support after.

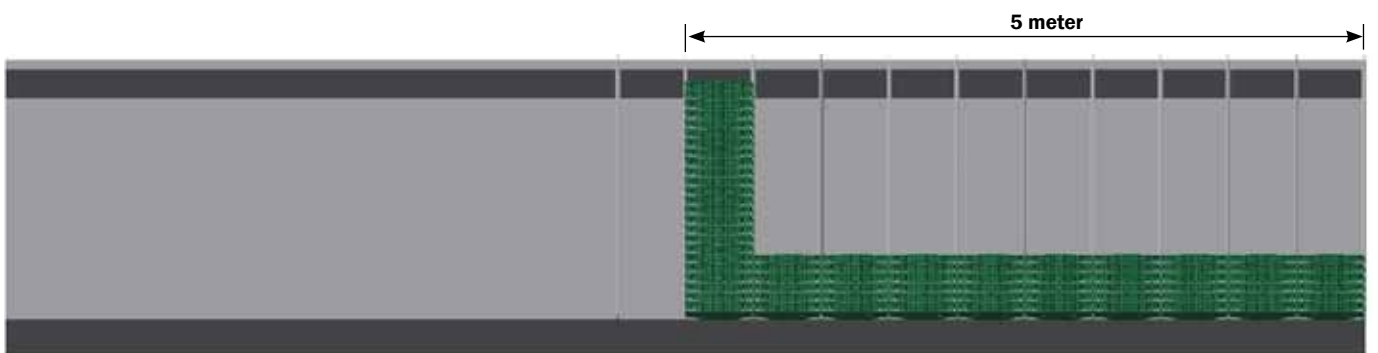


Slats is placed in extension of each other sideways

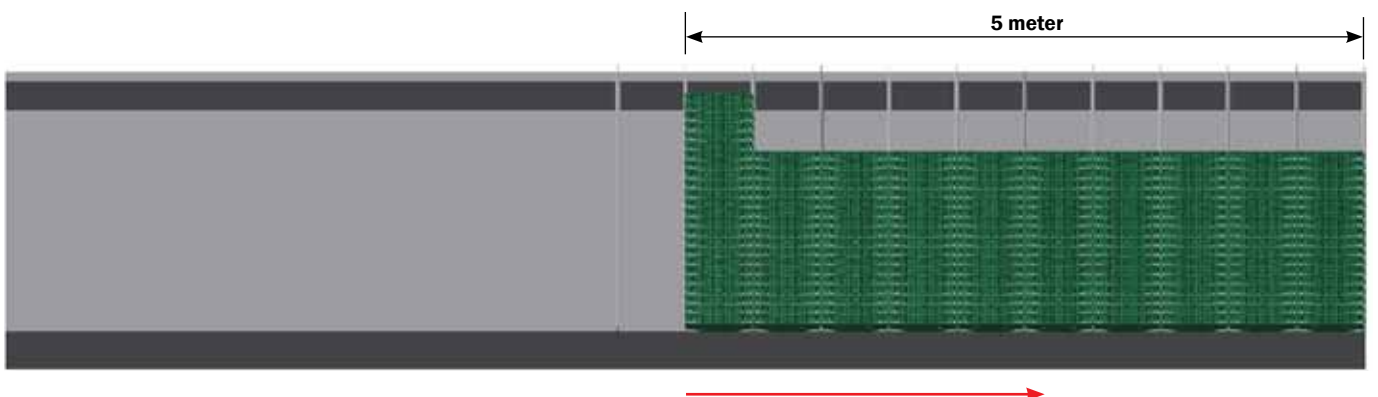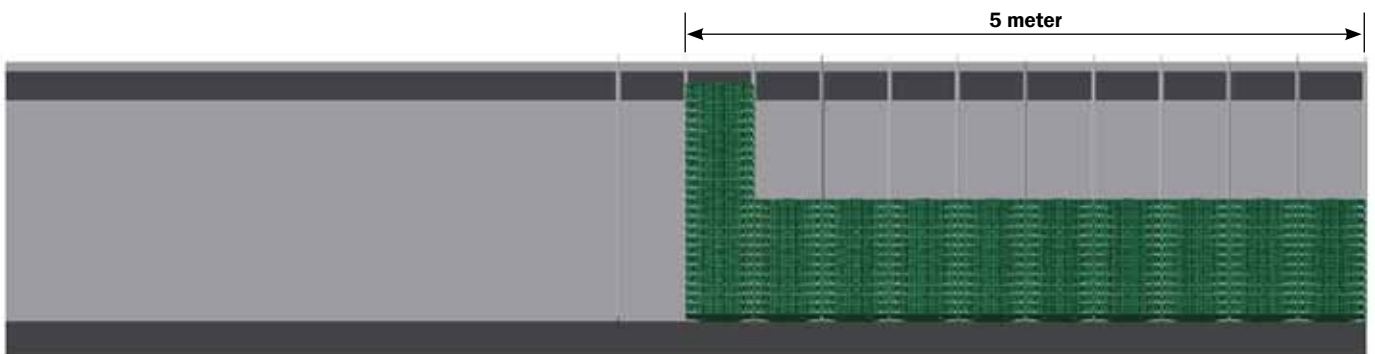



MOUNTING OF SLATS FOR COMBI-FLOOR

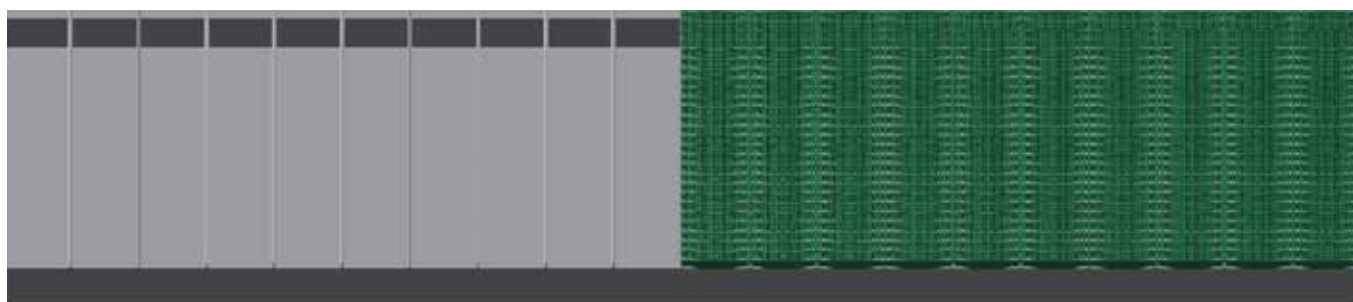


Placing of support side 2

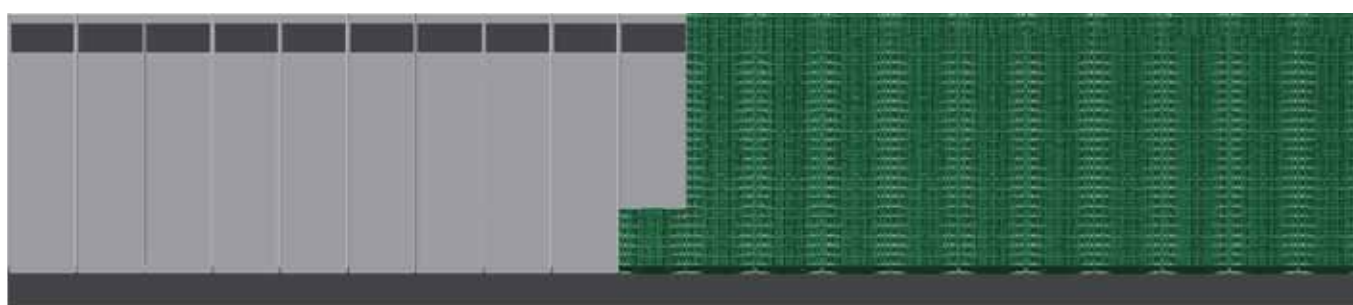


Slats is placed in extension of each other sideways.

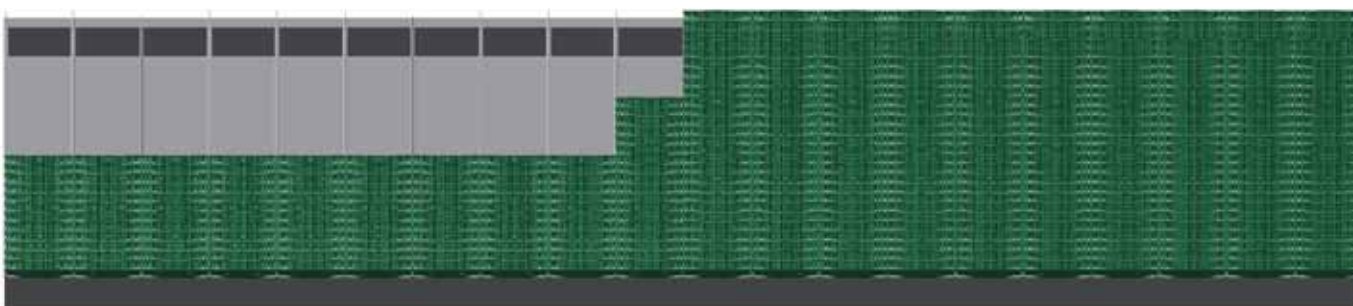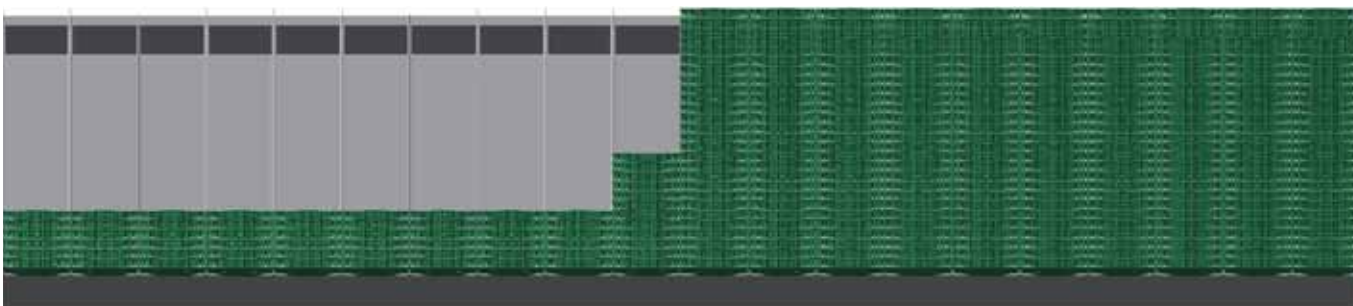

MOUNTING OF SLATS FOR COMBI-FLOOR

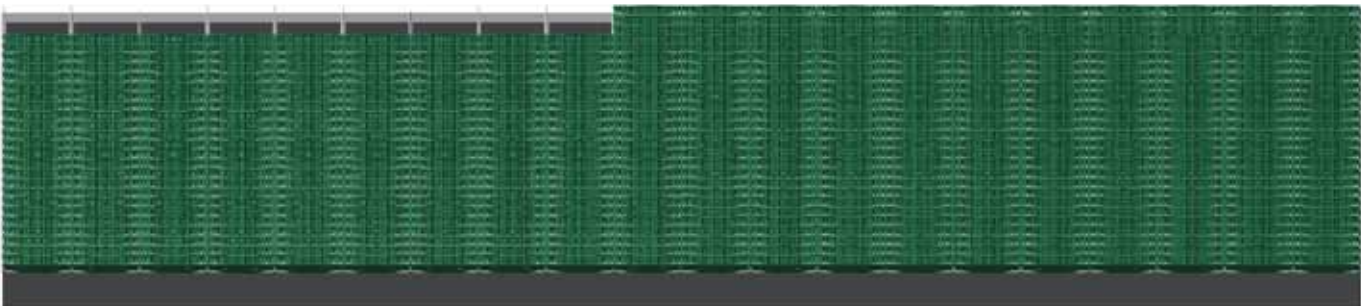

ADAPTATION OF SLATS

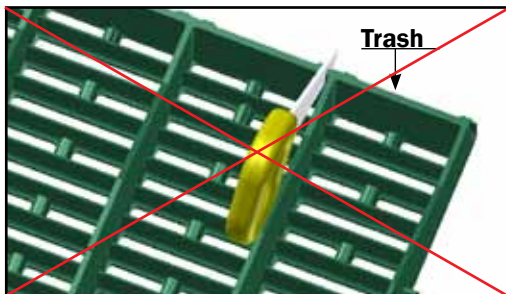

For adaptation of slats in length direction.

